

KEY FEATURES

- edge protection of tiled stair treads
- drainage of water from tread surfaces
- coated for long-term durability and full corrosion resistance

INSTALLATION TOOLS

BODY	AW 6060 aluminium alloy
WEIGHT	SC1 - approx. 300 g/m (linear meter)
COATING SYSTEM	0.6 g/m ² conversion coating, and min. 60 µm polyester powder coating

INSTALLATION TOOLS

You will need the following tools: folding ruler, knife, electric drill, hand-held mixer, string line, pencil, spatula, metal handsaw or circular saw. Circular saw should be equipped with an aluminium cutting blade to cut without damaging the trim coating.

BASE

The base should be sound, level and clean. Screeds should cure for 28 days and achieve adequate strength. A recess, 1.5 mm deep by 50 mm wide, should be made along the tread edge to allow setting the trim flush with the tread surface.

AMBIENT CONDITIONS DURING INSTALLATION

Ambient conditions should be as typically required for waterproofing and installation work.

COLOURS

Standard colours: RAL 7037 dusty grey, RAL 7024 graphite grey, RAL 8019 grey brown. Other colours from RAL Classic chart are available on request.


INSTALLATION

SC1 edgings are set on sealing slurry and secured in place with plastic plugs.

SEE PRODUCT →




SC1 tile-in stair edgings are used to give a neat finish and protect tiled stair edges.

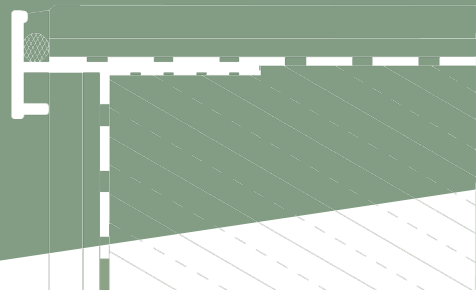

INSTALLATION GUIDELINES


Protect the paint coat from damage during installation. Reject any damaged components. Any dirt should be removed from the surfaces using water and non-abrasive cloth. Wet materials, such as sealing slurry or tile adhesive, should be removed from outer surfaces before drying. The manufacturer shall not be liable for any damage resulting from product misuse or using inadequate auxiliary materials or tools. All work must be in compliance with construction plans, product data sheet, relevant standards, good construction practice and safety requirements.

DIMENSIONS

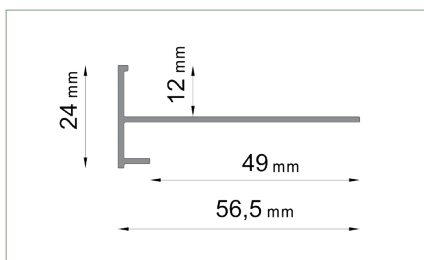

SC1 TILE-IN STAIR EDGING



INSTALLATION EXAMPLE

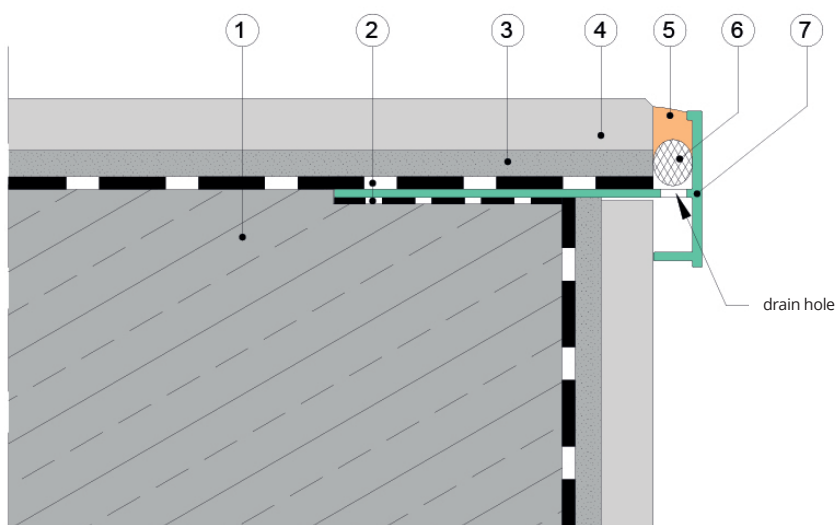

1. Stair core
2. Sealing slurry
3. Deformable tile adhesive
4. Porcelain pavers
5. Polyurethane sealant
6. 6 mm backing rod
7. SC1 tile-in stair edging

drain hole

SC1 tile-in stair edgings are used to give a neat finish and protect tiled stair edges.

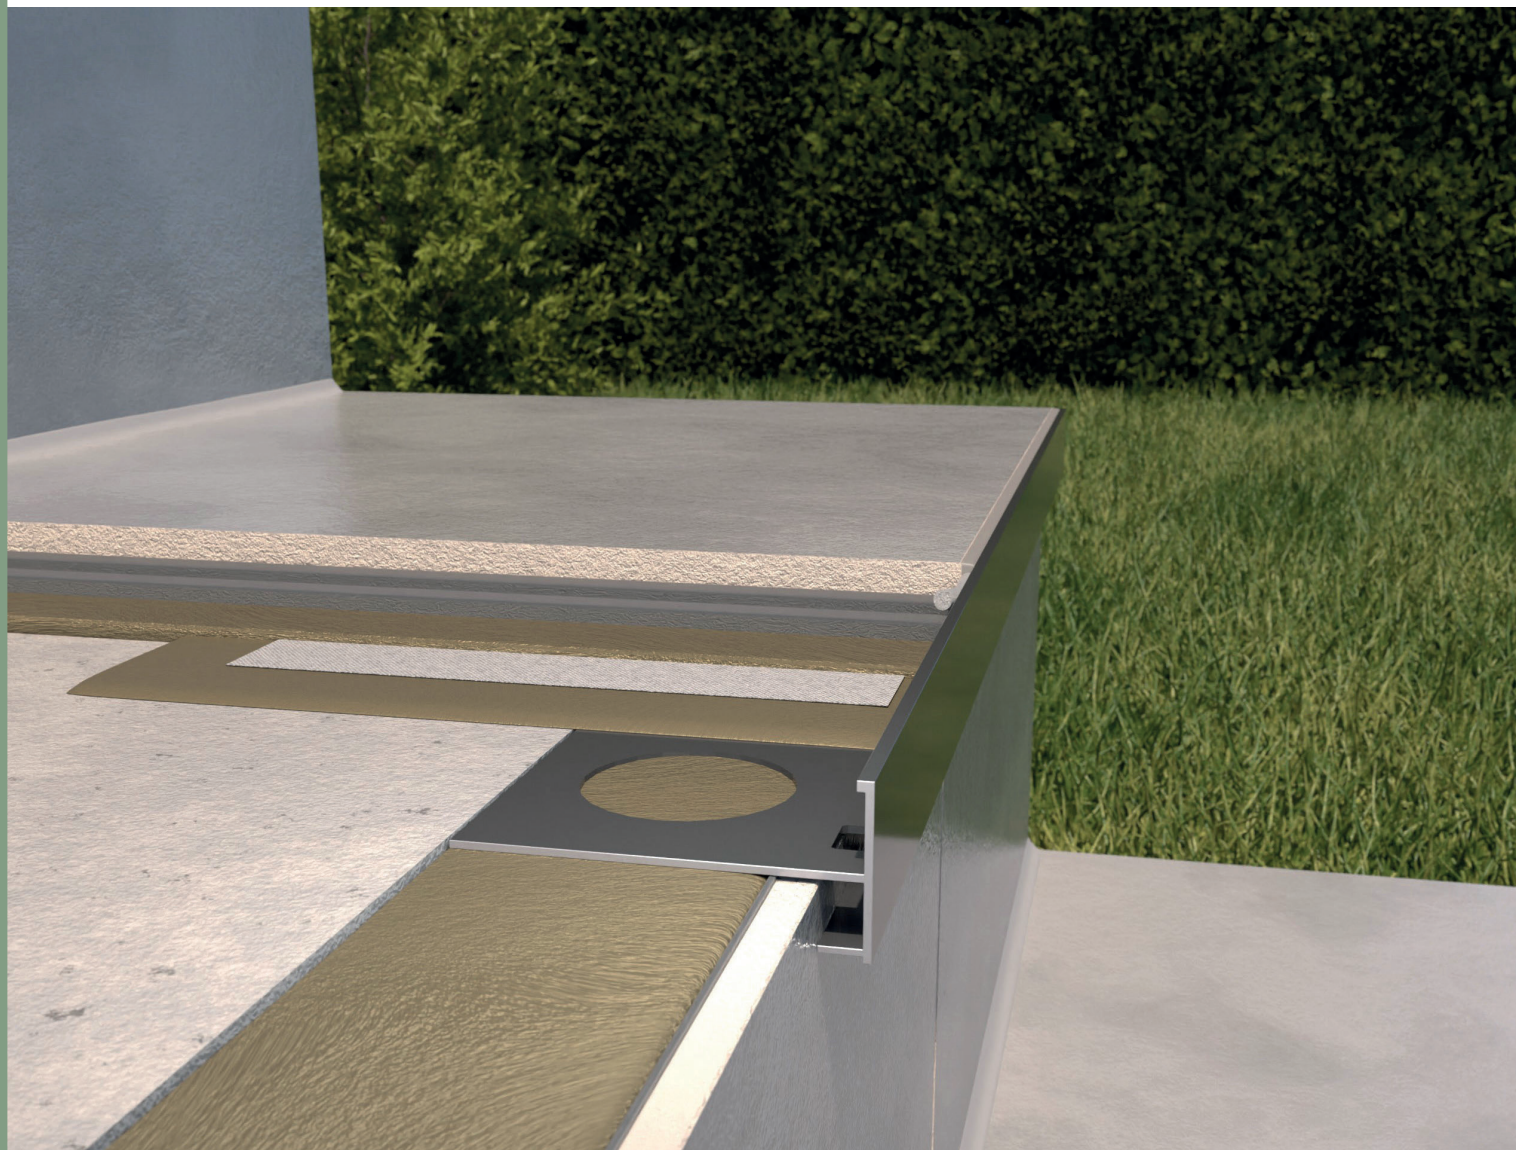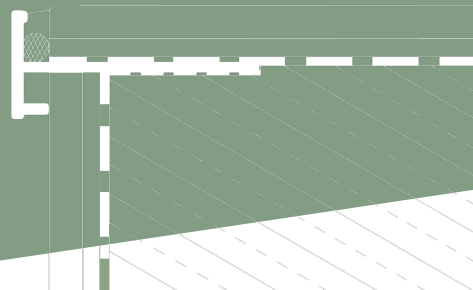

Notes:

Edition: 8.07.2026. This product brochure supersedes all previous editions. It gives recommendations for standard application conditions only, and thus shall not be used in place of installation drawings. Suitability of our products for particular conditions should be verified by the contractor. The actual product specifications may vary slightly due to allowable process or tool dimension changes. Any materials used in combination with Renoplast products must be obtained from reputable sources. Our liability for any omissions or inaccuracies of the data given in this brochure is limited to gross disinformation and/or negligence.

Renoplast

RENOPLAST Sp. z o.o.
phone: +48 697 635 580
office@renoplast.pl
www.renoplast.pl/en

