


SZ10 and SZ15 stair edgings are used to give a neat finish and protect the tread edges of stairs with pebblestone flooring.

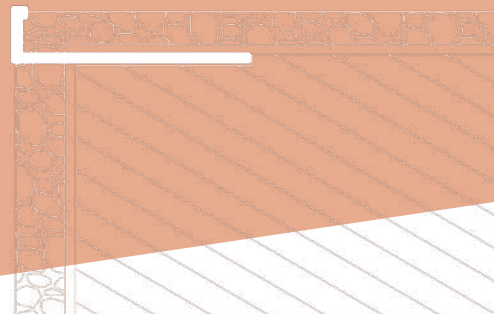

KEY FEATURES

- edge protection of stair treads
- drainage of water from tread surfaces
- coated for long-term durability and full corrosion resistance

TECHNICAL DATA

BODY	AW 6060 aluminium alloy
WEIGHT	SZ10 approx. 200 g/m (linear meter), SZ15 approx. 210 g/m (linear meter)
COATING SYSTEM	There are two finishing options of RENODRAIN S system: uncoated or coated with 0,6 - 1,2 g/m ² conversion coating, and min. 60 µm polyester powder coating.

INSTALLATION TOOLS

You will need the following tools: folding ruler, knife, electric drill, hand-held mixer, string line, pencil, spatula, metal handsaw or circular saw. Circular saw should be equipped with an aluminium cutting blade to cut without damaging the coating.

BASE

The base should be sound, level and clean. Screeds should cure for 28 days and achieve adequate strength. A recess, 1.5mm deep by 50 mm wide, should be made along the tread edge to allow setting the trim flush with the tread surface.


AMBIENT CONDITIONS DURING INSTALLATION

Ambient conditions should be as typically required for waterproofing and installation work.

COLOURS

Standard colours: RAL 7037 dusty grey, RAL 7024 graphite grey, RAL 8019 grey brown. Other colours from RAL Classic chart are available on request.

SZ10 and SZ15 stair edgings are used to give a neat finish and protect the tread edges of stairs with pebblestone flooring.

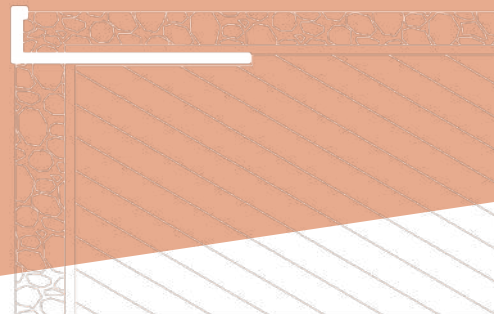


INSTALLATION GUIDELINES


Protect the paint coat from damage during installation. Reject any damaged components. Any dirt should be removed from the surfaces using water and non-abrasive cloth. Wet materials, such as sealing slurry or tile adhesive should be removed from the outer surfaces before drying. The manufacturer shall not be liable for any damage resulting from product misuse or using inadequate auxiliary materials or tools. All work must be in compliance with construction plans, product data sheet, relevant standards, good construction practice and safety requirements.

DIMENSIONS

CROSS-SECTIONS:

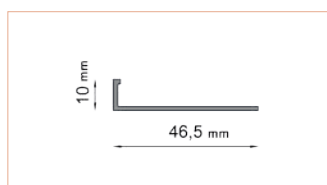


**SZ10 PEBBLESTONE
STAIR EDGING**

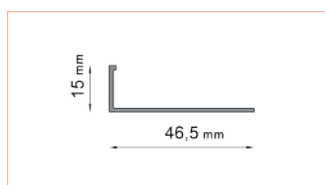

**SZ15 PEBBLESTONE
STAIR EDGING**

INSTALLATION EXAMPLE

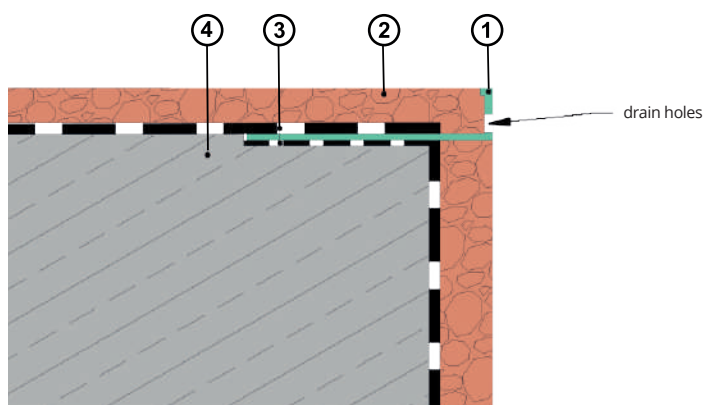


1. **SZ10/SZ15 stair edging**
2. **Pebblestone flooring**
3. **Waterproof barrier recommended by the resinous coating manufacturer**
4. **Stair core**

Renoplast


SZ10 SZ15

STAIR EDGING

SZ10 and SZ15 stair edgings are used to give a neat finish and protect the tread edges of stairs with pebblestone flooring.

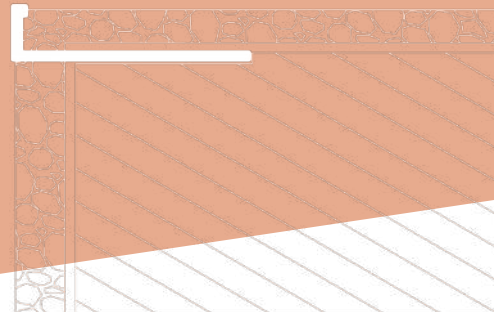

SZ10 STAIR EDGING

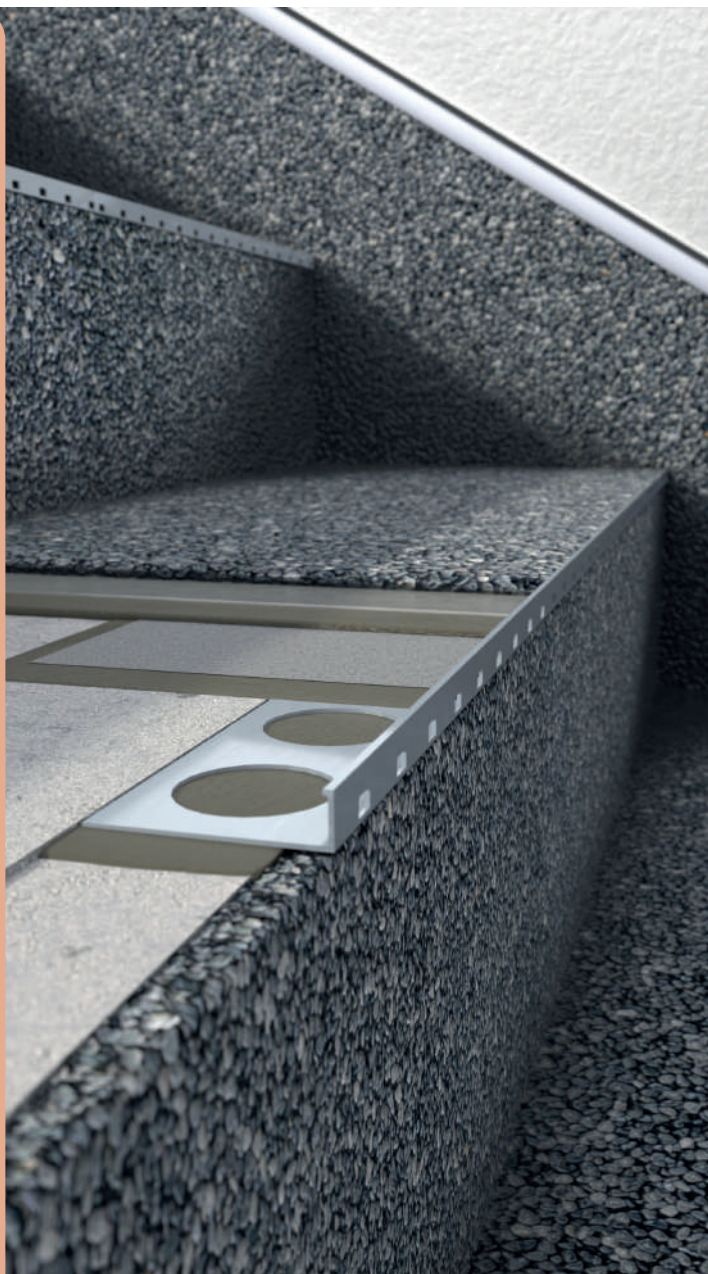

SZ15 STAIR EDGING



Notes:

Edition: 17.07.2026. This product brochure supersedes all previous editions. It gives recommendations for standard application conditions only, and thus shall not be used in place of installation drawings. Suitability of our products for particular conditions should be verified by the contractor. The actual product specifications may vary slightly due to allowable process or tool dimension changes. Any materials used in combination with Renoplast products must be obtained from reputable sources. Our liability for any omissions or inaccuracies of the data given in this brochure is limited to gross disinformation and/or negligence.

Renoplast

RENOPLAST Sp. z o.o.
phone: +48 697 635 580
office@renoplast.pl
www.renoplast.pl/en

